


## INSTRUCTIONS

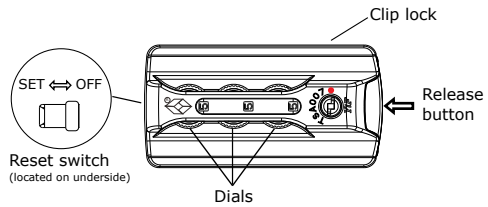

The factory preset combination is 0-0-0

To set your personal combination for the first time, follow the steps below. Follow the same process for each clip lock.

### To check your lock before you start:

1. Ensure the dials are set to 0-0-0.
2. Close the clip lock if it is not already closed.
3. Push the release button to release the clip lock.
4. Close the clip lock again and turn one dial to lock the case (for example to combination 1-0-0).
5. Try pushing the release button - it should now be blocked.
6. Set the combination back to 0-0-0 and push the release button to release the clip lock.

### To set your personal combination:

1. Ensure the dials are set to 0-0-0 and the clip lock is open.
2. Slide the reset switch (located on the underside of the clip lock) from the off position to the set position.
3. Set your combination by turning the dials (for example 8-8-8)
4. Slide the reset switch back to the off position.
5. Your combination is now set. Close the clip lock and push the release button to check the clip lock releases.

Memorise your combination or note it down below and keep these instructions in a safe place for future reference.

**My combination is**

<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------

## TSA LOCK



This luggage features a Travel Sentry approved lock, which allows your luggage to be unlocked and inspected by the United States TSA and other security agencies without damaging the lock.

Security agencies use a special master key to open the lock. It can then be locked again after inspection.

Please note the lock does not come with a key. The keyhole is for use by security agencies only.