

Operating Instructions

Tage Triple Touch-Free Sensor Recycling Bin 44L

Assembly

1. Remove lid component from main bin compartment.
2. Remove battery compartment cover from reverse side of the lid.
3. Remove battery pack from battery compartment and insert 4 x AAA (1.5 Volt) batteries, into the battery pack.

IMPORTANT: insert batteries according to the correct polarity, as illustrated on the battery pack.

4. Place battery pack (with batteries) back inside battery compartment, ensuring it is orientated as follows:



5. Replace battery compartment cover.
6. Place lid component back on top of main bin compartment.
7. Your lid is now activated and ready for use.

Operation

Each lid has two operating functions – Sense and Touch.

A sensor pad is located towards the front of the lid surround and is used to control both functions.

1. Sense

Swipe your hand over the sensor pad (within approximately 30cm) and the lid will open.

The lid will remain open for a period of approximately 5 seconds, after which it will close automatically.

2. Touch

Touch the power button icon on the right side of either sensor pad and the lid will open.



Touch the power button icon a second time and the lid will close.

Once opened, the lid will remain open for a period of approximately 30 seconds, after which it will close automatically.

Warnings

- To avoid damaging the motor gearbox, do not apply any resistance to the lid during opening and closing.
- Always remove exhausted batteries from the product & dispose of carefully.
- Batteries are to be replaced or recharged by an adult only.
- Remove batteries if product is not used for extended periods of time.
- Do not mix old and new batteries or different types of batteries.
- Observe the correct polarity as illustrated inside the battery pack.
- The supply terminals are not to be short-circuited.
- Rechargeable batteries are to be removed from the product before being recharged.
- Non-rechargeable batteries are not to be charged.