

# MADE<sup>+</sup>

## Flip Clock Instructions

**PLEASE READ THESE INSTRUCTIONS CAREFULLY & RETAIN FOR FUTURE REFERENCE**


### ACTIVATING THE CLOCK

Remove the battery cover from the back of the clock. If batteries are already fitted then please remove the isolation tab to activate the clock. To replace the battery insert 1 x new D (1.5V) battery into the battery compartment, taking care to observe the correct polarity. Replace the battery cover.

### TIME SETTING

To set the clock to the desired time, rotate the "Time Set Knob" on the right hand side of the clock until the correct time is reached.

**Please note that if the time set knob is turned in the incorrect direction, this will damage the function of the clock.**

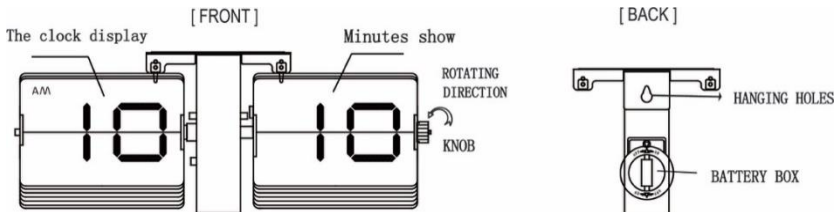

**Please take care when handling this clock as the flip numbers can be easily damaged.**

**This clock can be used as either a wall or mantel clock. When using as a wall clock, please note the below fixing instructions.**

When attaching the clock to the wall please ensure that you use a screw and wall fixing suitable for the size and weight of the clock.

1. Use a large screw and wall fixing suitable for your wall.
2. Drill a suitable sized hole to insert the wall plug.
3. Gently tap wall plug into drilled hole.
4. Insert screw into the wall plug, leaving the screw protruding slightly.
5. Hang clock onto the protruding screw, taking care to ensure clock and screw are mated correctly.

### Care instructions

- Wipe clock with a soft dry cloth only.
- Replace battery every 12 months or when the clock stops.

### Battery safety & disposal

- Dispose of batteries responsibly at local authority household waste recycling facility.
- **DO NOT dispose of batteries in a fire as the batteries may explode or leak.**
- **Only use 'D' 1.5V batteries in this clock.**
- Never use rechargeable batteries.
- Replace all batteries at the same time; NEVER mix new and used batteries, different types or brands.
- Never try to dismantle batteries.
- Never short circuit batteries.
- Exhausted batteries must be removed from the clock promptly.
- Remove batteries from the product before extended storage.

This symbol indicates that this product, and any batteries, should not be disposed of in normal household waste but taken to appropriate local recycling centres, where available. Never throw batteries in a fire or attempt to open outer casing.

