



MADE⁺

Bjorg Dining Chair

HARDWARE AND COMPONENT





TOOL REQUIRED



PEOPLE REQUIRED



MADE IN VIETNAM

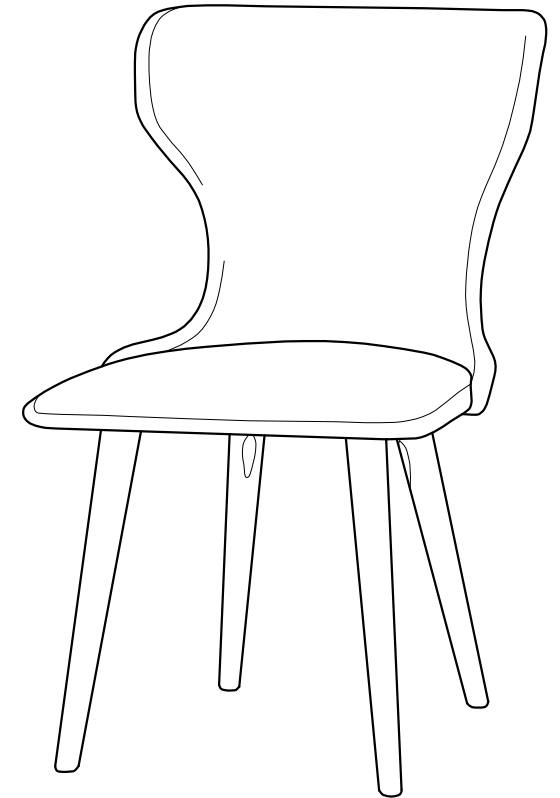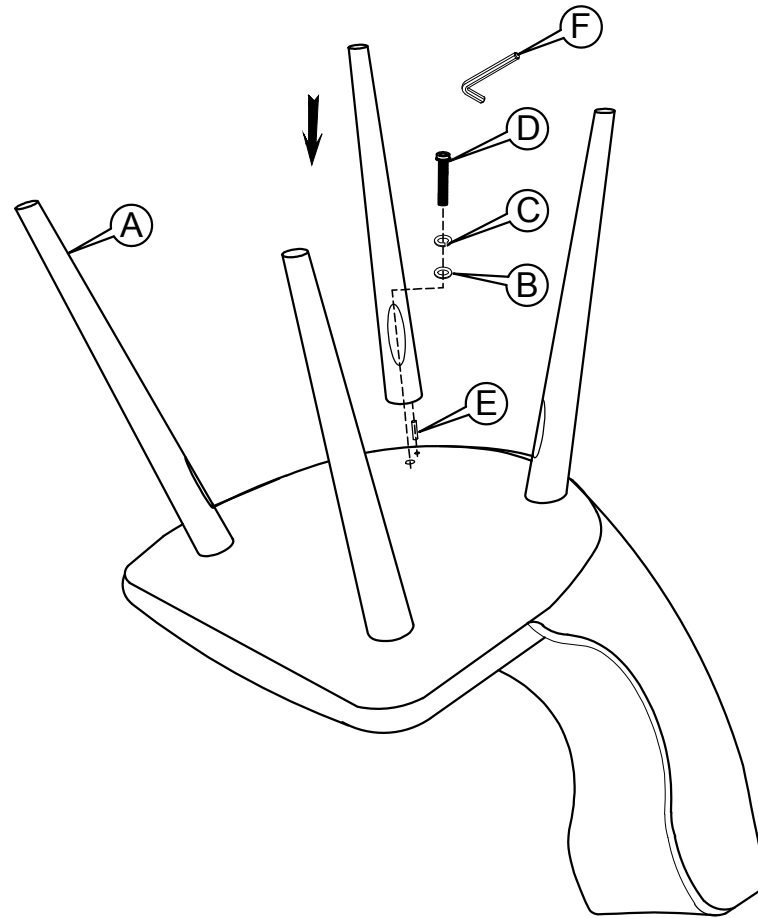

Please take time to identify the hardware as well as the individual components of the product.

As you unpack and prepare for assembly, place the parts on the floor, ideally on a padded area to protect them from damage

1—Turn the Chair upside down, put the leg A at the corner of the seat, same as above picture

2—Using Allen-key E to drive the Hex-socket-screw C in the nut (Turning in a clock-wise direction). Do the same for rest 3 legs.

3—Turn the chair upside down again. Finished